


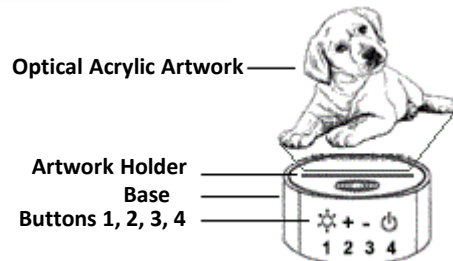

Safety Instructions:

- Remove transparent protective film from BOTH sides of acrylic artwork before inserting into the base.
- Do not touch acrylic surface. Marks on the surface may affect the quality of the 3d lighting effect.
- Always switch the power off overnight, when not in use, or when left unattended.



Audience Light Setup & Operation:

- **Make sure battery is fully charged** by USB Cable before first use (may take overnight).
- **LONG Press Button 4 to Power On or Power Off.** At Power On, unit plays acknowledgement sound and says “Bluetooth Mode” (or “Memory Card Mode” if card inserted). Unit says “Power Off” at shutdown.
- To **illuminate** the artwork, **Short Press Button 1.** Repeat to select desired light color/mode: red, blue, green, purple, cyan, or “dance to the music mode”.
- Unit will **always** Start in Memory Card Mode if card inserted. **LONG Press Button 1** to select Bluetooth or Memory Card.

Memory Card Operation:

- Insert **memory card** with contacts facing up. Card will “click” into place. (To remove, push until “click”, then release). To play **Memory Card, LONG Press Power On Button 4.** The Audience Light will confirm by saying “Memory Card Mode”.
- To **Skip to previous** memory card track, **Short Press Button 2.** To **skip to next** memory card track, **Short Press Button 3.**
- To **Pause, Short Press Button 4.** Repeat to resume.
- To adjust **volume UP, LONG Press Button 2.**
To adjust **volume Down, LONG Press Button 3.**

Bluetooth Operation

- If Memory Card is installed, LONG Press Button 1 to enable “Bluetooth Mode”, otherwise unit will be in Bluetooth mode. Enable Pairing on your phone. The Audience Light will confirm by saying “Paired”. If pairing does not occur, turn off the Audience Light, reboot your phone, turn on the Audience Light, re-enable Pairing on your phone.

Troubleshooting: If unit not responding, charge battery. If battery was discharged, unit may require a few minutes of charging before operating.

Button 1:

Light Color/Mode (Short Press)
*Bluetooth or Memory Card Mode (Long Press)

Button 2 :

**Skip to previous track (Short Press)
Volume Up (Long Press)


Button 3:

Skip to next track (Short Press)
Volume down (Long Press)

Button 4:

Power On/Off (Long Press)
Pause/Resume (Short Press)

*Unit starts in Memory Card Mode if card installed. Unit starts in Bluetooth Mode if no Memory Card.
**Some phone APPs may not allow this feature.

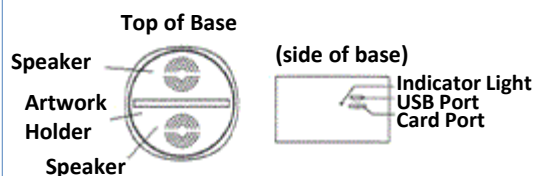

Product Specifications:

- Input Voltage: 4.5V-5V
- Power or recharge by USB Cable
- Output Power: 2-2.5w
- Lithium battery (compliance UN3481 PI967 (ELI))
- Battery Capacity: 1200 MAH
- Memory Card (not included): MicroSD / TF Card

Cleaning Instructions:

Wipe with a clean soft cloth. Do not use abrasive cleaners. Avoid damaging surface.

